


FUEL PUMP

Replacement Harness Installation Procedures:

1. Cut the wires of both replacement and original vehicle harness at staggered lengths (as depicted in below diagram) ensuring the cuts are separated by at least 1 inch (25.4cm).
2. Strip the wires approximately ¼ inch (7mm).
3. Insert the stripped wire ends into the included butt connectors.
4. Reference the below color code diagram to match the vehicle wire colors and position to the replacement style connector.
5. Use a wire crimping tool to crimp the wires with the electrical butt connectors.

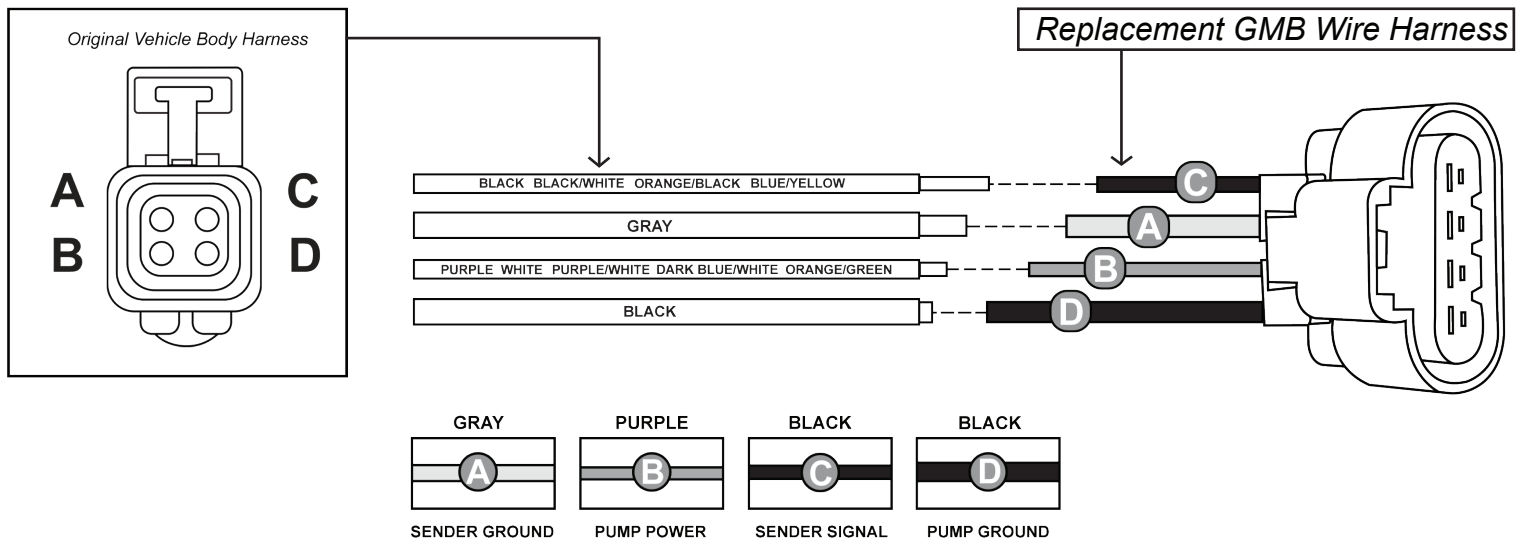

NOTE: Crimped connectors must be staggered to allow the harness to fit inside the vehicle wire sleeve.

